

Recommendations for the replacement of individual damaged single lap tiles

1. Remove remains of damaged tile. To aid removal carefully lift the tail of the adjacent tile to the left of the damaged tile and support using a short piece of tile batten.



2. Apply a continuous bead of adhesive to top headlap area of replacement tile, across full width of tile. Use an adhesive suitable for the type of tile being replaced. Following adhesive manufacturer's recommendations.
3. Apply a continuous bead of adhesive to side interlock of replacement tile, along full length of tile.
4. Carefully insert replacement tile into roofing. Remove piece of batten supporting adjacent tile and then press surrounding tiles onto adhesive. Ensure all tiles are sitting correctly.
5. Drill a hole through the tail of the replacement tile, passing through the head of the tile below and into the timber batten of the tile below. Secure replacement tile using a stainless steel screw and sealing washer.

Note: The above recommendations are for replacing individual single lap tiles only. All surrounding tiles must be correctly fixed in accordance with usual Manufacturers' recommendations. See Sandtoft Technical Literature for further information.

For more information please contact Sandtoft Technical Support on 0870 145 2021.

March 06