



Ulti-Line Tile Vents Fixing Instructions

1

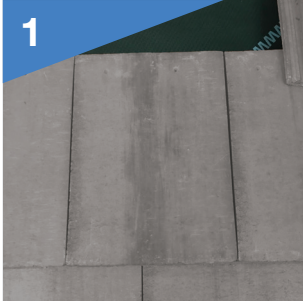


Set out the roof and lay the tiles in line with the manufacturers fixing instructions until you reach the area where the vent tile is to be fitted.

5




Continue to fit the remaining tiles again in line with the manufacturers fixing instructions.

2

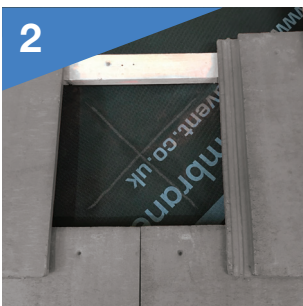


Remove the tile where it is to be replaced with an Ulti-Line Tile Vent and Mark the cut line as shown.

6




With the Ulti-Line square Top Vent if a wider channel is needed to suit the concrete tile being used, cut out the two thinner wall sections on the front leading edge as highlighted in the adjacent drawing.

3

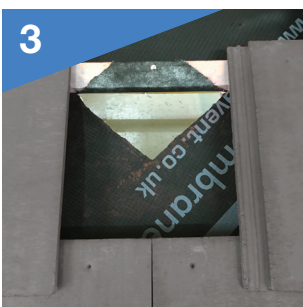


Cut the underlay as marked out and lift the cut sections with top section this is to be fixed to the batten above the opening.

7

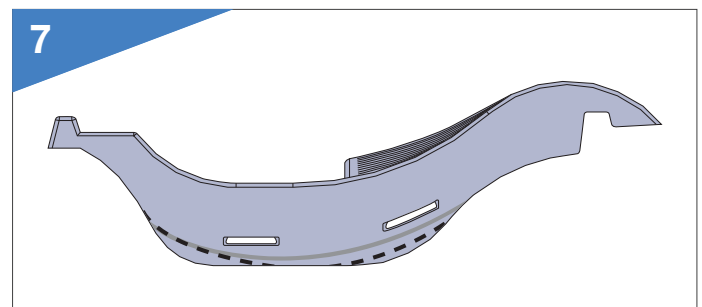

4

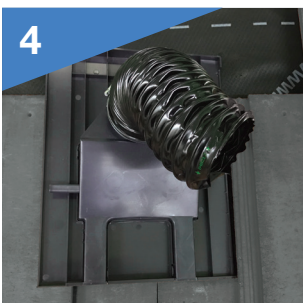

Select the Vent Tile to match to profile and colour and fit either without a flexipipe (if just being used for roof ventilation) or with a Ulti-Mate® Flexipipe ULTI3FP for connection to Soil Pipe of Mechanical Extraction.

When using this product for the Forticrete Centurion no cut required, for the Redland Fenland and Sandtoft Shire cut leading end on dotted line and for the Marley Anglian cut the solid line.



All products are covered by our 15 year Durability Warranty terms and conditions can be found on our website.



All plastic products are made in UK.