

RussFast Dry Ridge 5m

Components



RussFast Ridge Roll 5m
Ventilated or Unventilated



Uni Angle
Multi
Half Round
RussFast Ridge Union
x10



Ridge Batten Connector
x10



100mm x 4.5mm
s/s screw x10



RussFast Union Clip
x10

Step 1



Install the underlay 30mm down from ridge apex. Position the central legs of the **Ridge Batten Connectors** to suit the rafter angle. Secure to each rafter with 2No. 30x3mm Galvanized Clout nails through the holes provided.

If using the unventilated **RussFast Ridge Roll** then lap the underlay over the ridge as recommended by the underlay manufacturer.

Step 2

Position and secure the top tile battens, overhanging the verge by 45mm. Place a 50mm square ridge batten (or alternatively secure 2No. 50x25mm tiling battens together) across the opened out **Ridge Batten Connectors**.



RussFast Dry Ridge 5m


Step 3



Fold up the 4 arms of each **Ridge Batten Connector**, tightly fold over and secure the **Ridge Batten Connectors** with clout felt nails 30x3mm galvanised clout nails (not supplied) through the holes provided.

Step 4

Lay the tiles as per fixing specification (available at www.russellrooftiles.com/fixing-specification)

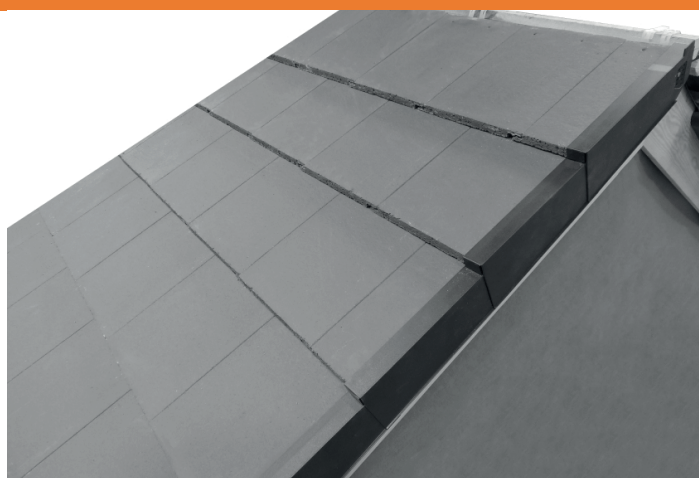

Step 5



Place the **Russfast Ridge Roll** centrally over the ridge batten. Remove the adhesive tape protector and smooth the roll over the laid tiles without crushing the corrugations.

Where **Russfast Ridge Rolls** need to be lapped a minimum cover lap of 100mm is required.

RussFast Dry Ridge 5m

Step 6

When using a **Ridge End Cap**, locate the first Ridge Tile centrally over the **RussFast Ridge Roll** and in line with the verge.



Step 7

Place the **RussFast Union** at the end of the ridge tile and position the next ridge tile after it. Fix the **RussFast Union Clip** into the slot in the top of the **RussFast Union** and secure with the **RussFast Drive Screw**.



Step 8

Finish off the ridge with a **Ridge End Cap** to suit the ridge tile profile and tile type (supplied separately). Gauge the depth of the ridge tree batten and secure with a **Screwnail** (supplied separately) through the appropriate hole.

Alternatively a Russell Block End Ridge can be used and secured using the supplied fixings.



RussFast Dry Ridge 5m



Notes

- RussFast Ridge Roll not suitable for installation in wet conditions
- RussFast Ridge Roll must not be installed in temperatures less than 5°C
- Minimum pitch equal to that of the Russell tiles being used
- Maximum pitch: 45° when used in conjunction with Russell's Dry Verge systems.
- Maximum pitch: 50° when used in conjunction with a Block End Ridge
- If used with unequal roof pitches contact Technical for further advice
- Tiles must be clean and dust free
- For unvented applications the underlay can be lapped over the ridge apex
- No ridge cuts to be included for the end 900mm
- When it is necessary to cut a ridge, ensure that it is not less than half. However for a more visually appealing finish it is advisable to trim several ridges by smaller increments, maintaining an aesthetically pleasing result.