

Installation guide

CaberDek is best used with CaberFix D4, an adhesive that's ideal for bonding flooring to joists, in tongue and groove joints and the exposed perimeter and edges of the floor. When applied in accordance with the installation instructions, CaberDek has full BBA approval for 60 days exposure*.

*When installed according to manufacturer's instructions

CaberFix D4 storage instructions

Store CaberFix D4 in a cool (from +5°C to +25°C), dry place in original unopened packaging. Protect from frost and moisture. Opened containers must be closed airtight and used up as soon as possible.

CaberDek step by step installation instructions



CaberFix® D4

- ✓ One adhesive – can be used for bonding to joists, in T&G joints and sealing edges
- ✓ Easy to use – 1kg easy to hold bottle with easy flow nozzle
- ✓ Foaming adhesive – can be seen in the joints making sure a seal is made


Board size	Boards per pack	Required bottles
18mm	100	19
22mm	82	15

Important information about CaberFix D4

All professionals and industrial users of CaberFix D4 must complete training before using products containing more than 0.1% of monomeric diisocyanates - for details and training visit <https://uk.westfraser.com/safe-handling-training-for-pu-adhesives/>


Step 1. Adhesive I-joint application

Apply one continuous ~6mm bead of CaberFix D4 adhesive to the top of the joist or I-joint. Use CaberFix D4 adhesive on joists and noggins in the area that is about to be directly laid.

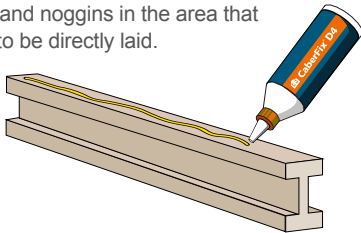

Step 2. Perimeter panel fixing


Panels should be fixed at the perimeter, using annular ringshank nails or screws at 200–300mm centres. Fix flush or just below panel surface.

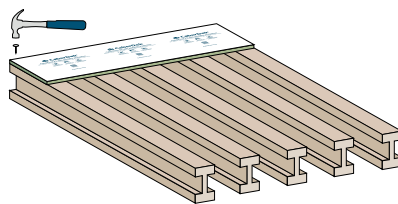

Step 3. Adhesive T&G application


A liberal application of CaberFix D4 adhesive should be made to both the tongue and groove of the profile joint of each panel to ensure that the entire joint is bonded.

When boards are pushed together a small amount of adhesive should be squeezed out of the T&G. This seals the joint at the T&G.

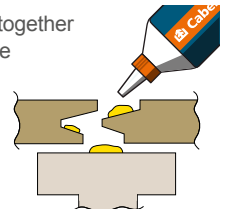


Step 4. Panel fixings

Continue laying boards in a staggered format. Panels may be secretly nailed through the tongue at T&G joints. For optimum performance we recommend a minimum of 5 mechanical fixings per 22 × 2400 × 600mm board when fitted at 600mm centres, i.e. 1 fixing per joist.

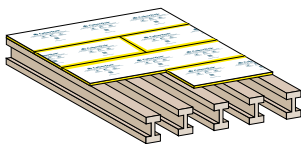


Step 5. Complete sealing

When installing CaberDek, any film that has peeled back from edges or T&G should be stuck back down using CaberFix D4 adhesive. For complete weather-tightness apply CaberFix D4 to exposed nail heads, cut edges and any exposed perimeter edges.

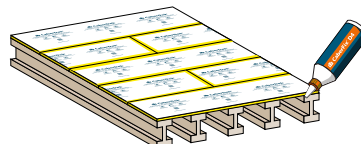

Step 6. Clean down

When all construction and decoration work is complete and the building is weather tight, the deck should be cleaned down: Remove the peel-off film by pulling slowly but firmly from the short end.

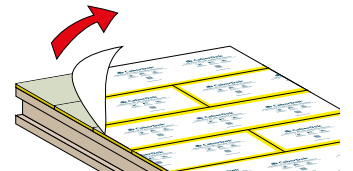

For advice on the best product for your specific application, please contact West Fraser on: **01786 819 225** or visit: **CaberFloor.com**



33898