


SONAS

www.sonasbarhrooms.com

tel:01 817 9755 fax:01 817 9764


INSTALLATION INSTRUCTIONS

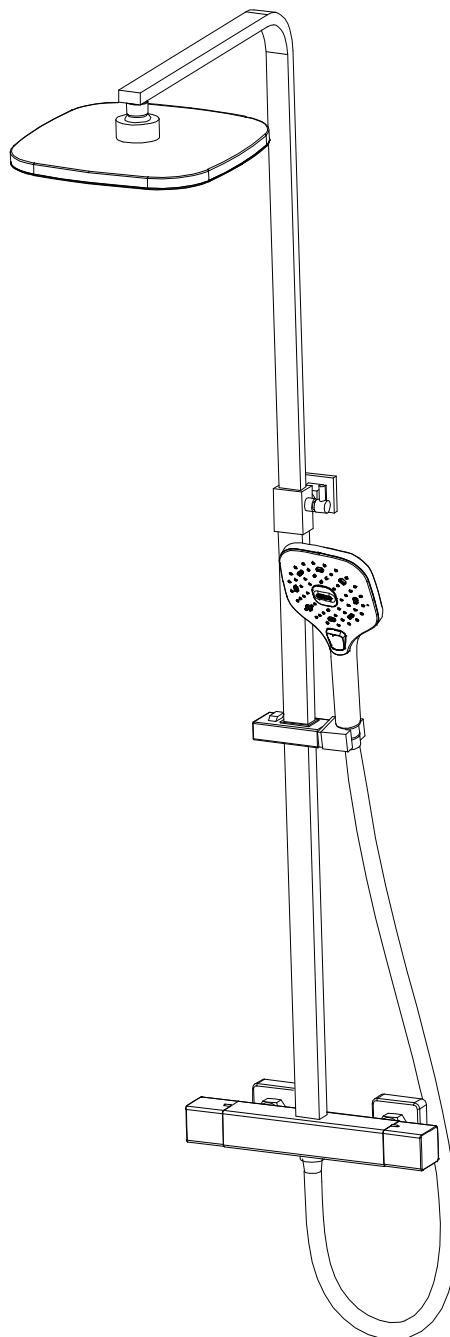

Before Installation

- We recommend that this product is installed by a qualified professional plumber / contractor.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and using.
- Please flush the water system to ensure that no metal swart, solder, and other impurities can enter the shower.
- Turn off water supply before commencing work, this should be done at the isolating valves of inlet feeds if fitted or main stopcock.
- Please read these instructions carefully and keep it for future reference.

Tools you may need

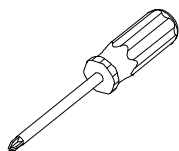


Phillips screwdriver




Adjustable wrench


x2

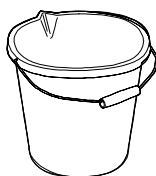

Bucket

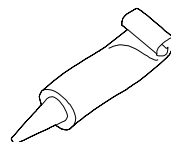


Silicone sealant

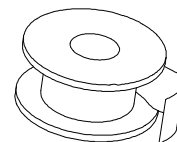

Pipe tape


Installation

1

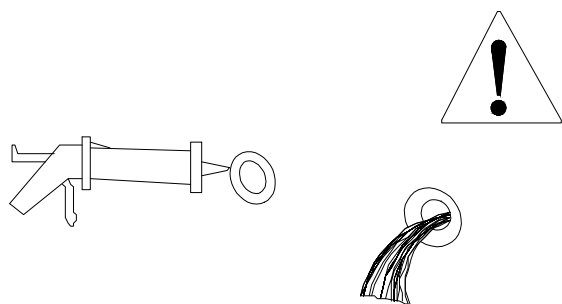


Fill the gap between the wall and the outlet hole with silicone. Turn on the valve and allow the water to run freely for 5 minutes. Then turn off the valve.

2

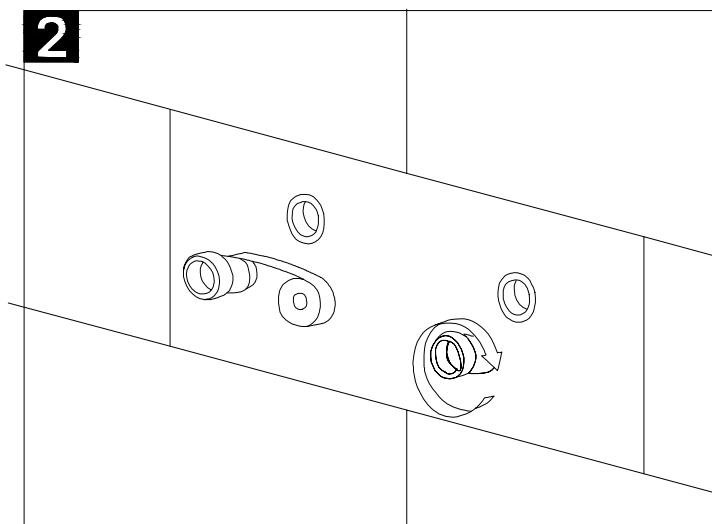


Wrap the bended connector with Teflon tapes. Then twist it into the outlet hole.

3

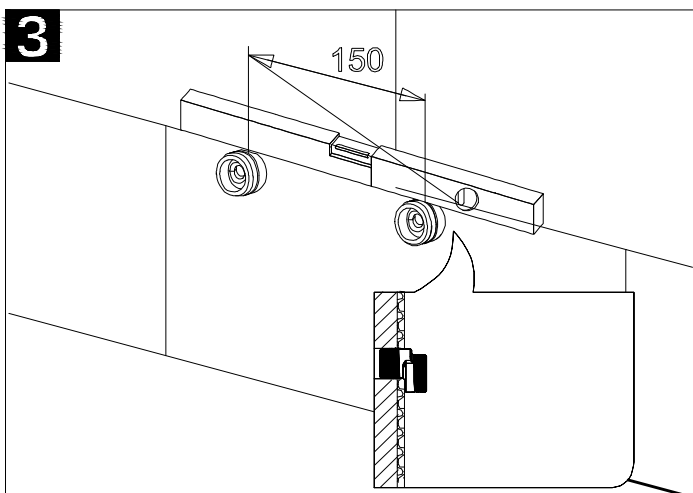


Adjust the position of the two bended connectors to be horizontal, and make sure the center distance to be 150mm.

4

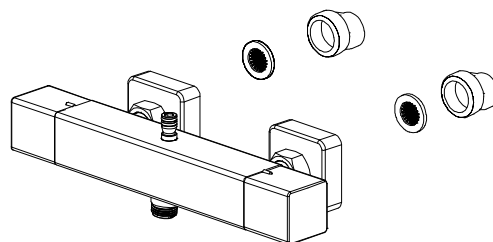


Install the flange to the bended connector, put the flat washer in the inlet hole. Lock the female screw to tight the mixer body.

5

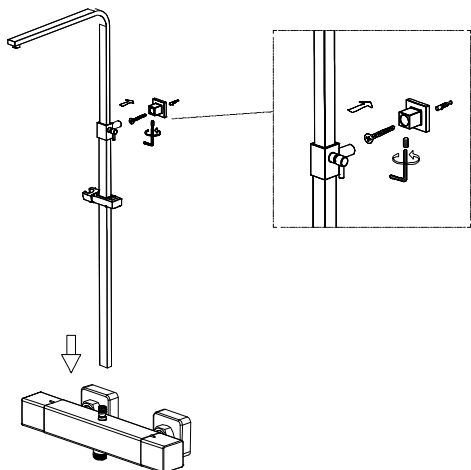


Adjust the straight pipe and connected to the mixer body, then lock the female screw tightly. And connect to the fixing plate. Tighten the grub screw with the allen key.

6

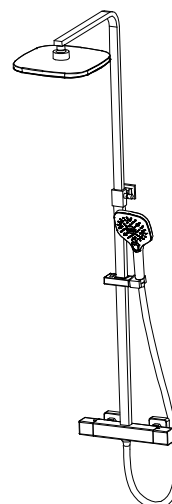

Install the head shower and the hand shower with the hose.

Dimension

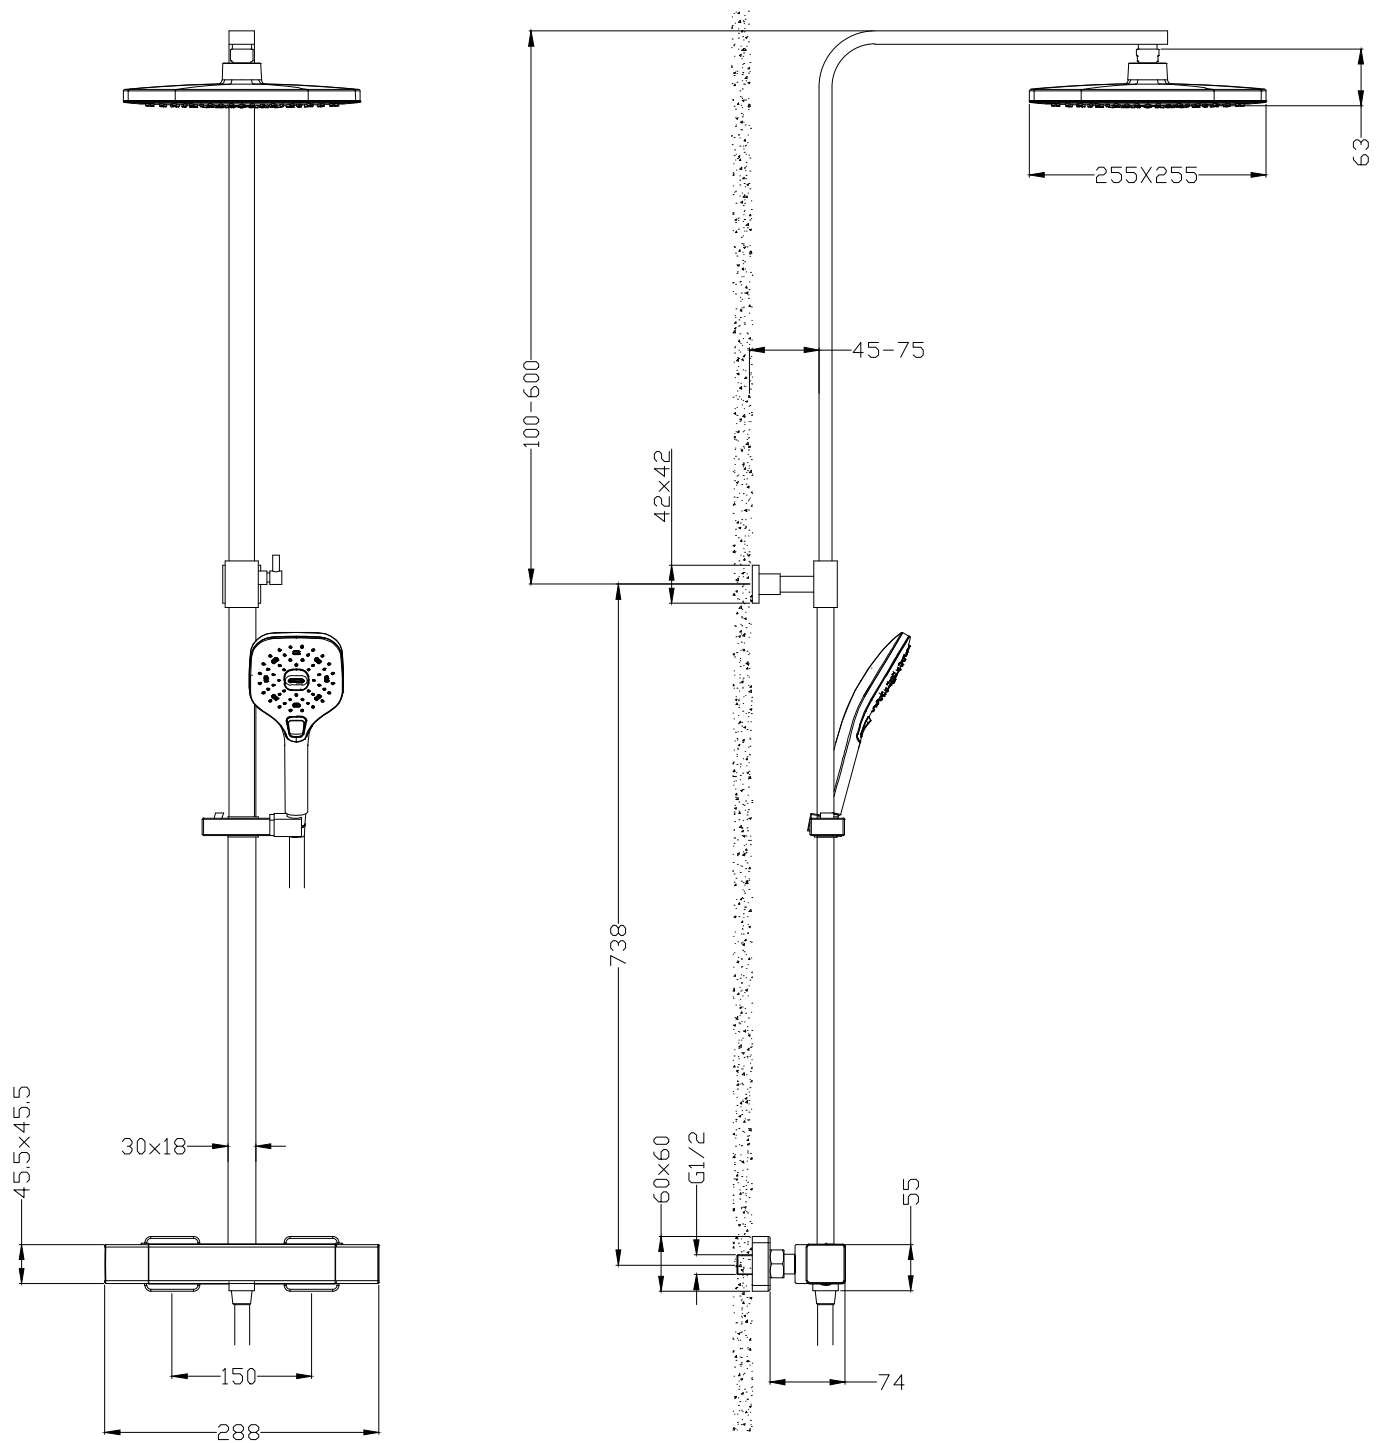

Cleaning & Maintenance

- All products should be cared for with a regular and suitable cleaning regime.
- The use of aggressive cleaning agents should be avoided and in particular on chrome, brass and aluminum surfaces a soft damp cloth and warm soapy water is sufficient.
- suitable ventilation should be provided in cases of bathroom furniture materials are water resistant but not water proof, therefore regular maintenance and the removal of excess water on or around the product is necessary to avoid damage.