



SLATE TRAY

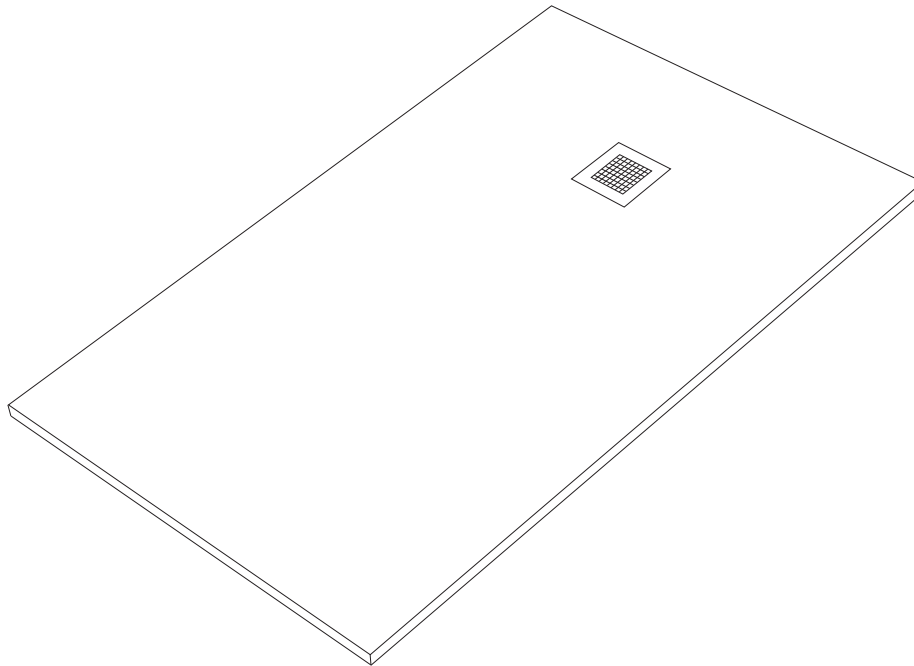


PRE-INSTALLATION CHECKLIST

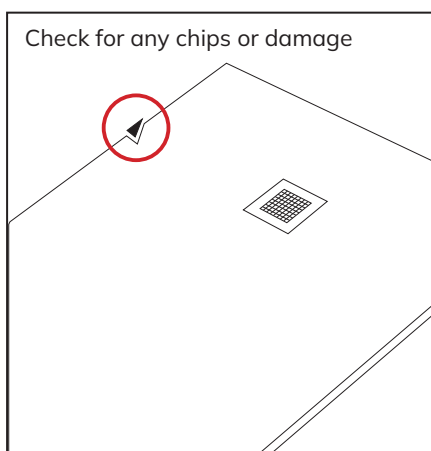

Inspect the Tray:

Ensure the SLATE shower tray is free from chips or any visible damage.

Verify that the tray is free from twists or warps.

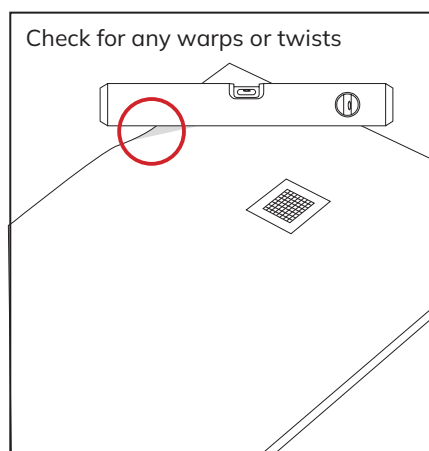


Prepare Installation Area:

Ensure the base where the tray will be installed is solid and level.


If installing on a wooden floor, use marine ply or concrete board for additional stability.

INSTALLATION INSTRUCTIONS

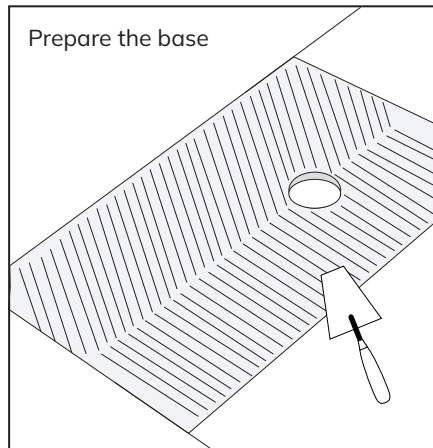


Prepare the Base:

Lay down a bed of sand and cement or tile adhesive on the prepared solid base.

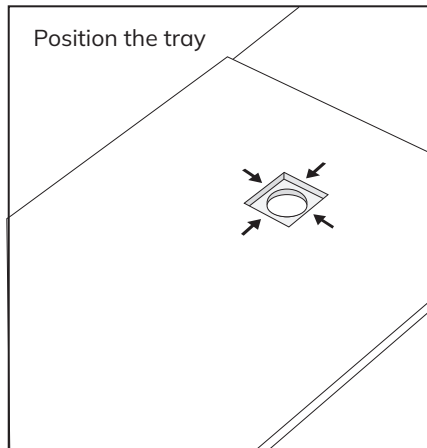


Position the Tray:

Ensure the waste outlet is aligned and kept to 172mm.

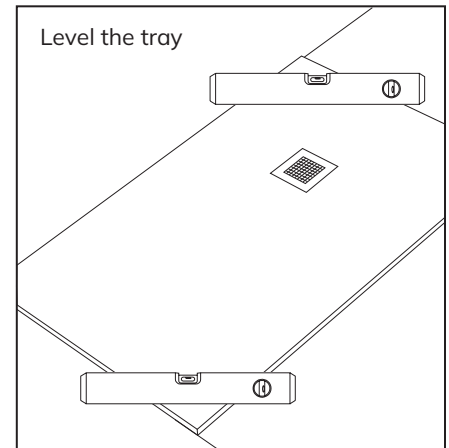


Level the Tray:

Place the SLATE shower tray onto the bed of sand and cement or tile adhesive. Use a spirit level to check and ensure all four sides of the tray are 100% level.

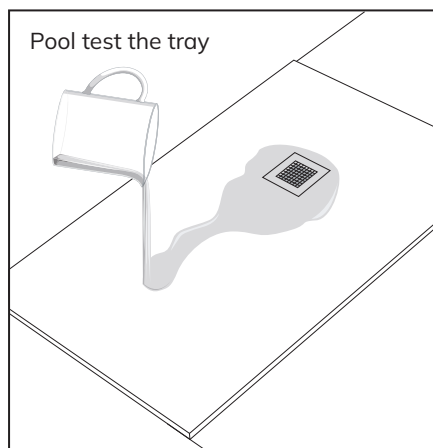


Pool Test the Tray:

Pour water from the back of the tray to ensure proper drainage on the full tray. Check that the water drains off the tray completely and efficiently.

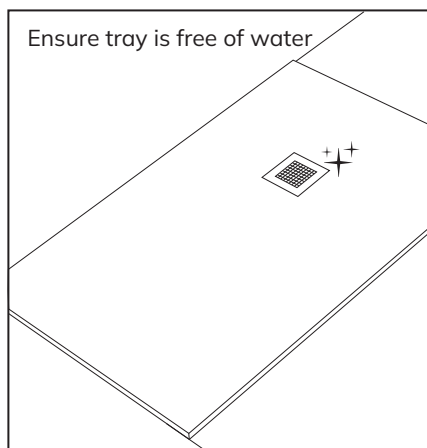

Final Checks:

Ensure the tray is free of water and properly drained before proceeding. Cover the tray before tiling to ensure the tray is protected.

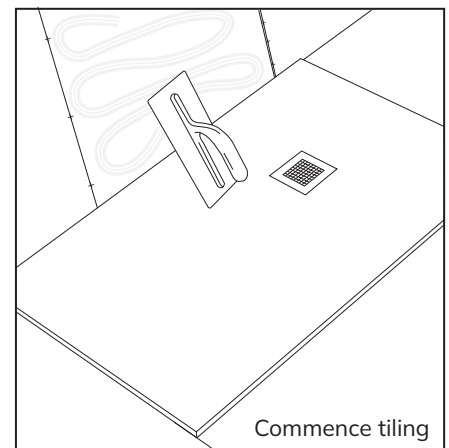

Commence Tiling:

Begin tiling only once the tray has passed the pool test.

Deemed Fit for Purpose:

The tray is now considered fit for purpose once it is free of water and the tiling can commence.