

Essentials 3 lever sashlock (J-ES-SL) installation instructions and template



Issue 2 (October 22)

General view of main parts

Strike plate

Sashlock

Key(s)

Tools required

- Scissors
- Pencil
- Masking tape
- Bradawl
- Cross head screwdriver
- 16mm chisel
- Mallet
- Ø10 and Ø16mm drill

1a

Cut out lock templates

1b

Mark centreline of door and frame.
At required height mark a horizontal line on door and frame.

2

Using the centreline guide and height guide, tape templates to door.
Mark the centres of all holes with a bradawl then remove template.

3

Ø16mm

	Dim 'A'
65mm Lock	72mm
79mm Lock	85mm

4a

Chisel out remaining timber between drill holes.

4b

5a

Mark and chisel 2mm for faceplate so it is flush.

5b

6

Ø16mm
Ø10mm

	Dim 'B'
65mm Lock	45mm
79mm Lock	58mm

7

Chisel out remaining timber between holes, and remove any sawdust.

8

Secure strike plate template to frame with tape. Using a bradawl mark all centres (+). Then remove template.

9

Ø16mm

25mm

10a

Chisel out remaining timber and remove any sawdust.

10b

11a

Strike plate to be flush

11b

1.5mm

12

Fix into position

13

Reverse latch if necessary before install

✓
✗


14

Use remaining fixings to install the lock into the door.




ASSA ABLOY

3 lever sashlock template

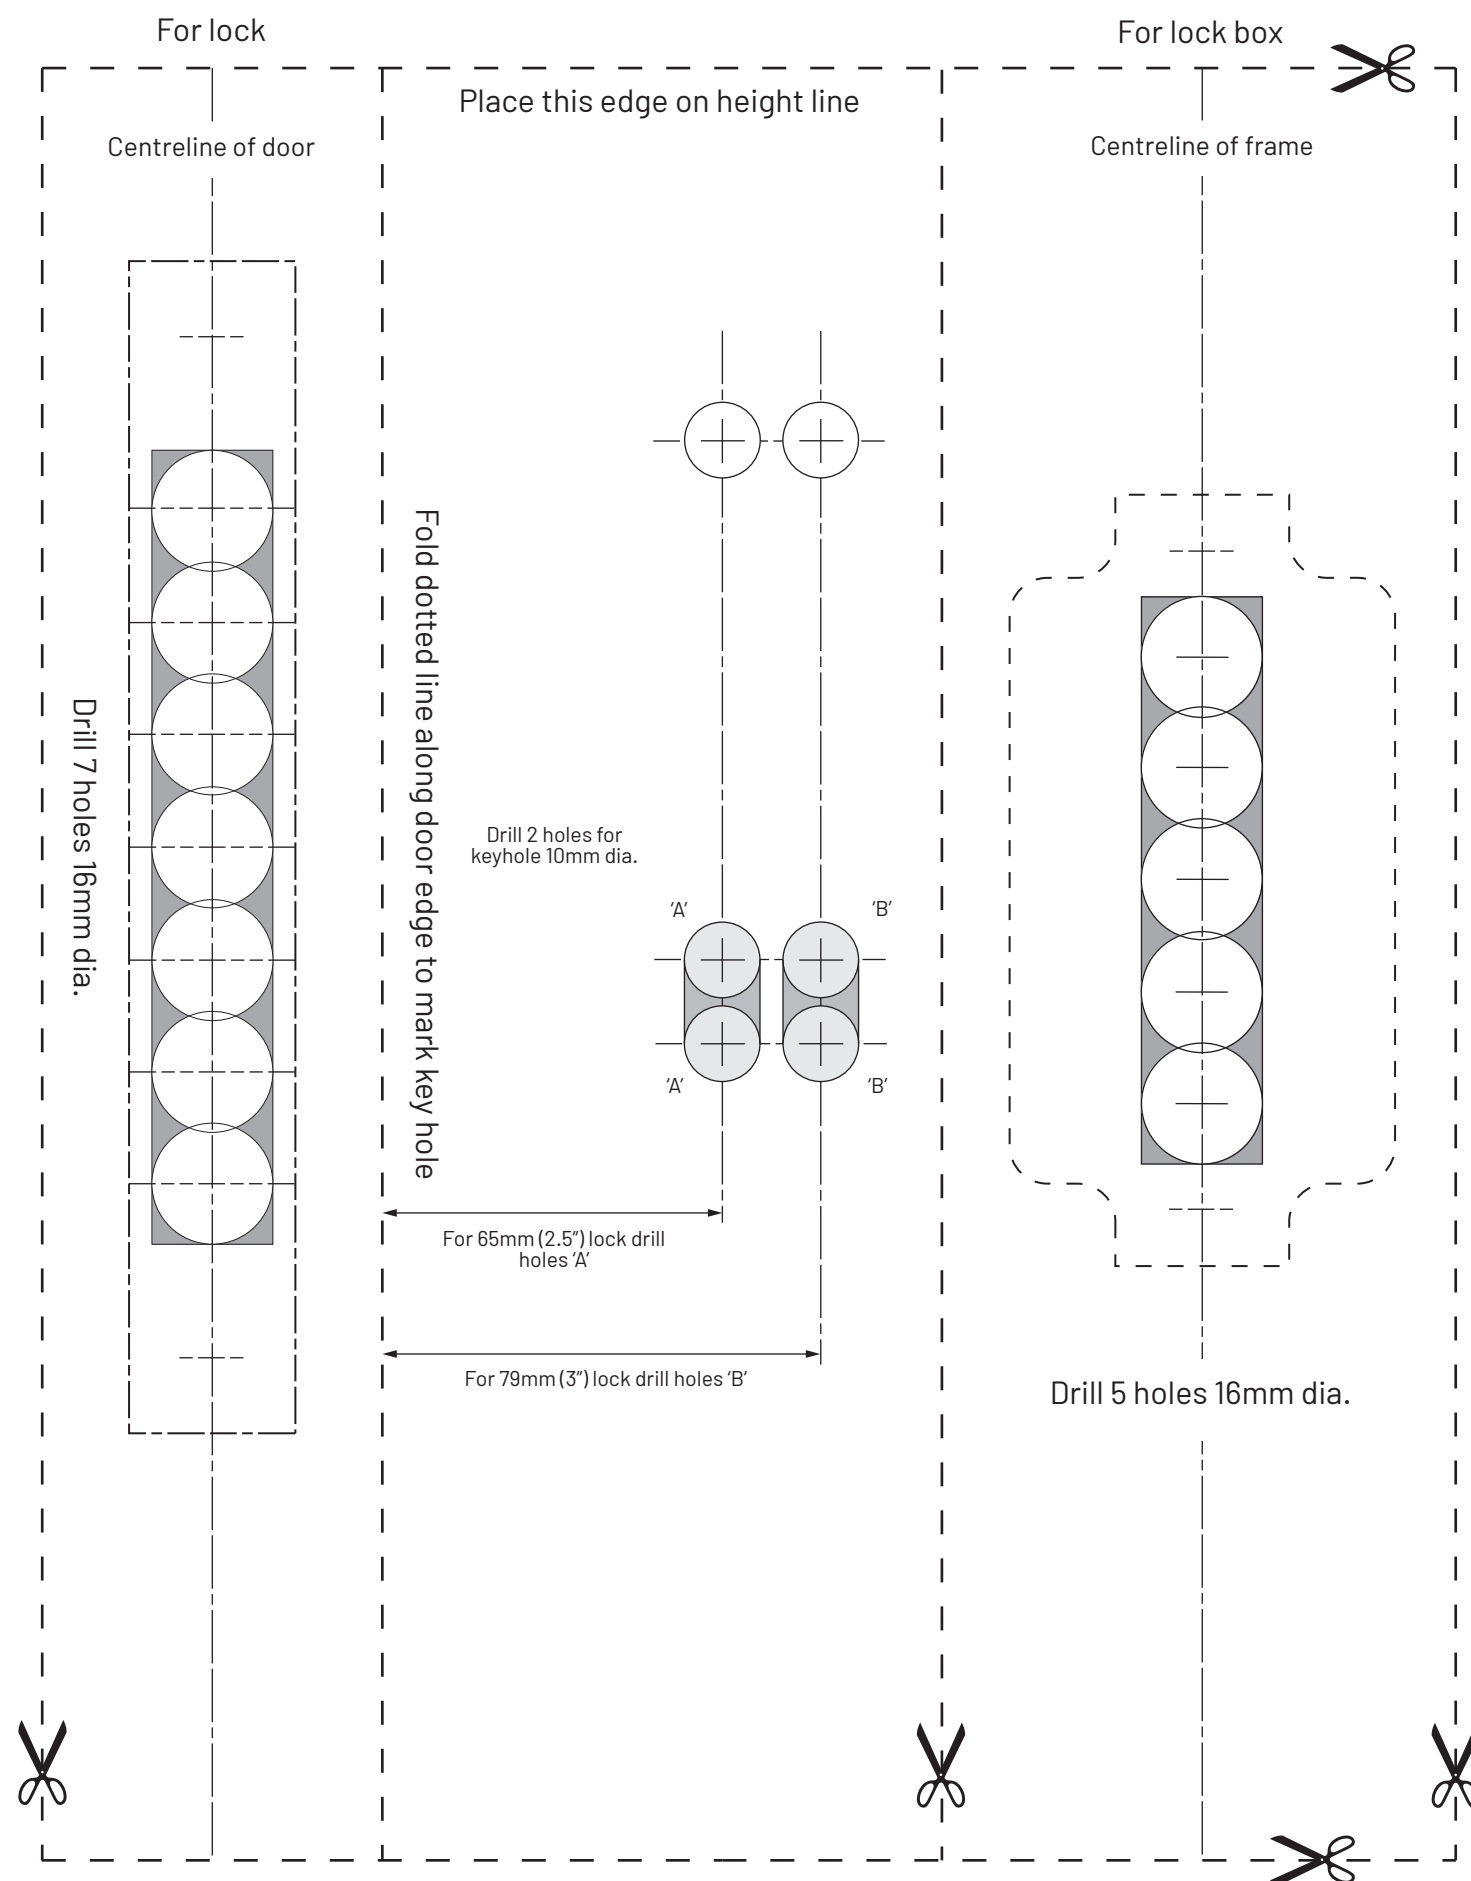

LH/RH Latch reversal

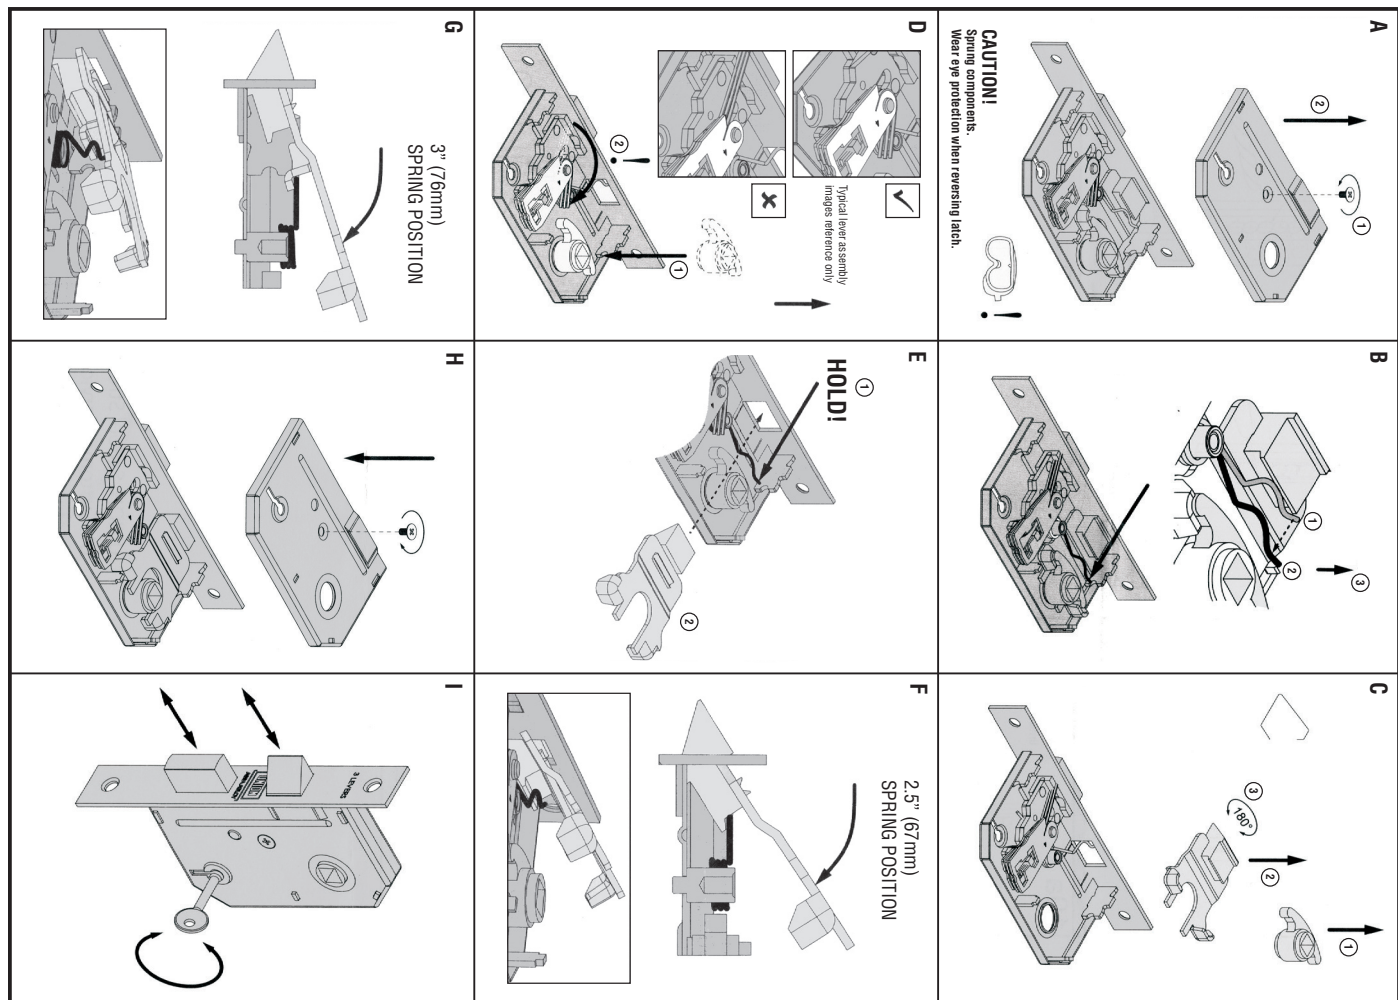

RH/LH Latch reversal

