
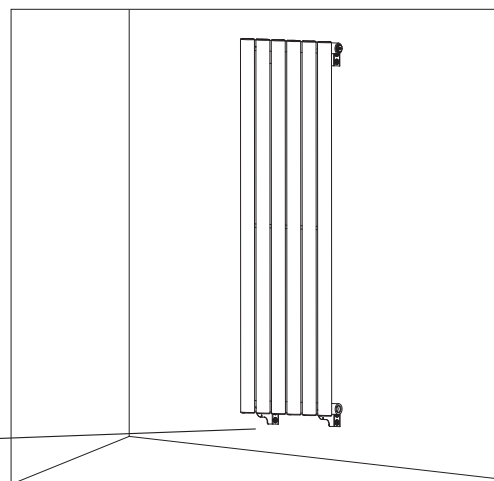
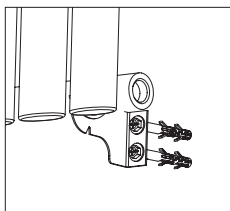
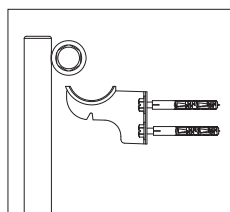
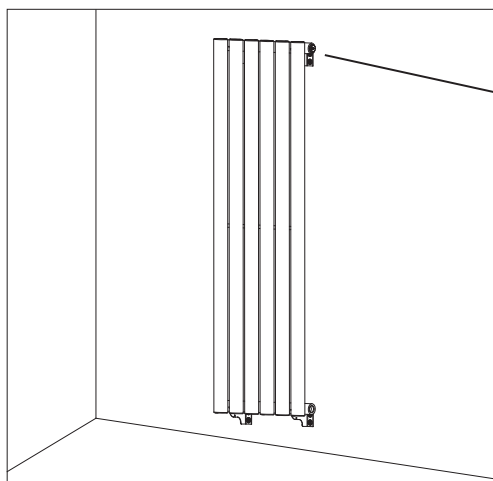
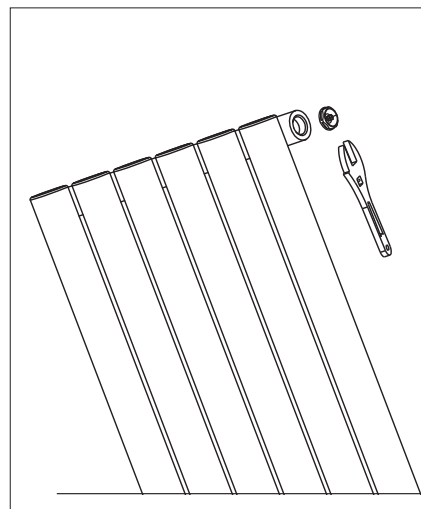
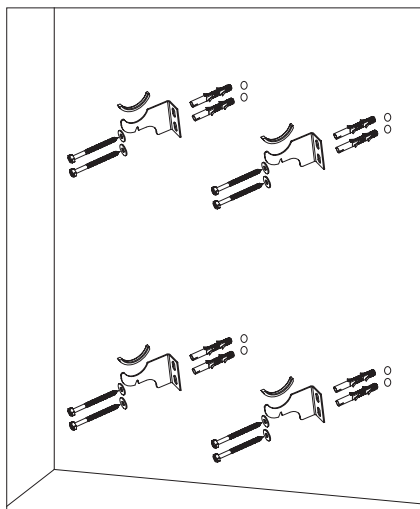
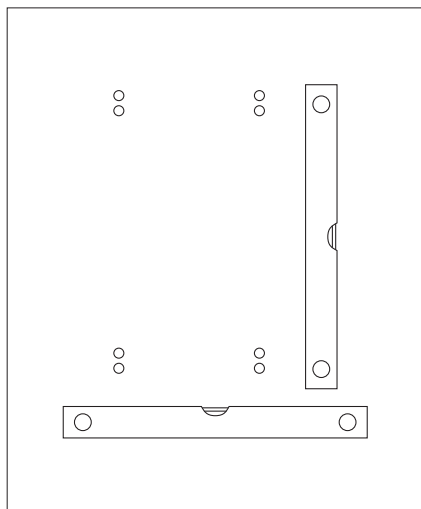
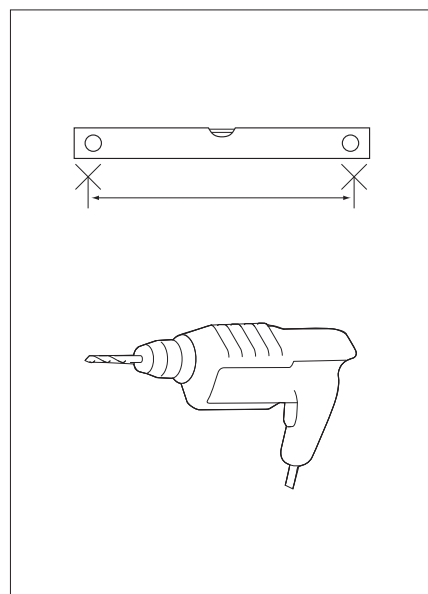


Radiator Installation

- Read the instruction sheet carefully before installation.
- Installation should be completed by a professional person.
- Please dispose of the packaging properly.

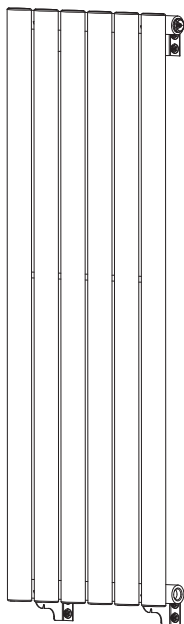

IMPORTANT NOTE :

These products (BOSTON & ASPEN) are fitted with a “ DIVERTER” .

The position of the “ DIVERTER” is marked on the product. When installing the radiator, the “ DIVERTER” must always be at the BOTTOM. Failure to do this will result in reduced all round heating performance or some parts not heating of the radiator installed.